
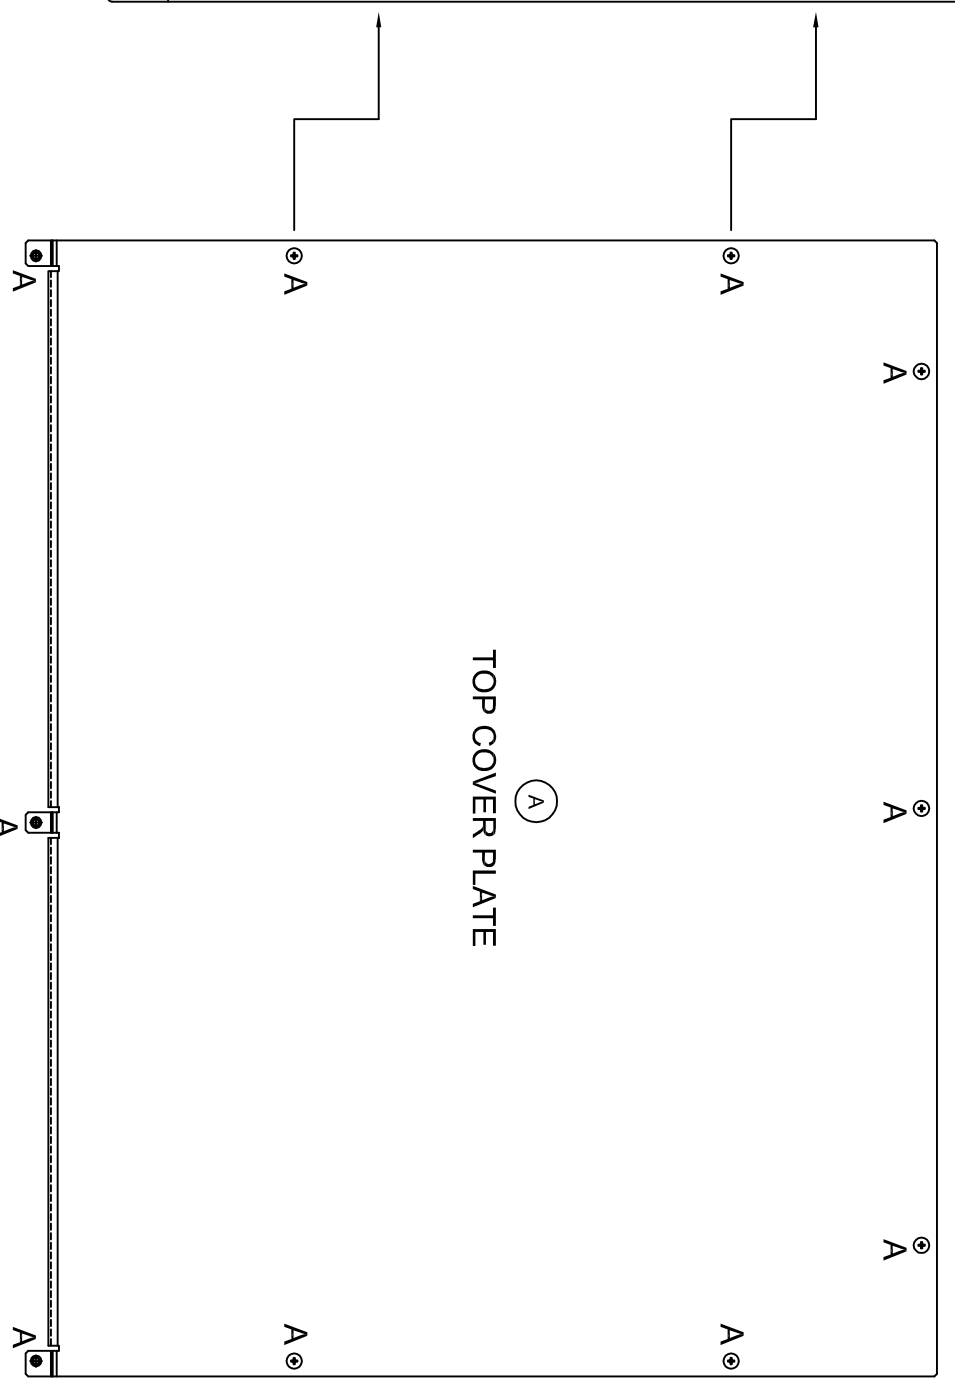


INSTALLATION PROCEDURE		TOOL REQUIRED
(A) REMOVE 100ff SCREWS (MARKED A) & TOP COVER PLATE FROM THE UNIT & KEEP SAFE TO RE-USE - SEE ITEM (E)		
(B) REMOVE EXISTING SCREWS, NUTS, WASHERS & COVER PLATE - DISCARD OR DISCONNECT 20ff CABLES MARKED ☆ & FOLD OVER REAR OF UNIT. TAPE PLASTIC SHEET IN INSIDE AT REAR OF UNIT. USING SHARP DRILL 3mm DIA. DRILL THRO' 20ff PILLARS FROM THE OUTSIDE OF THE UNIT. USING PLIARS, GRIP PILLARS, MOVE SIDE TO SIDE TO FATIGUE THE JOINTS AND DISCARD. REMOVE STEEL RINGS IF STILL IN PLACE. COLLECT SWARF IN PLASTIC SHEET & DISCARD CAREFULLY.	 OR 	
(C) SWITCH EXISTING 190ff JUMPERS FROM DEFAULT POSITION TO NEW POSITION AS SHOWN		
(D) FIT CABLE NNS415 TO CONNECTOR SHOWN ON MOTHERBOARD SMN812-369 & TO REAR PANEL WHERE SHOWN. SECURE USING 20ff JACK POSTS SUPPLIED (MARKED D) DO NOT OVER TIGHTEN RE-FIT 20ff CABLES MARKED ☆		
(E) RE-FIT TOP COVER PLATE USING EXISTING 100ff SCREWS FROM ITEM (A)		

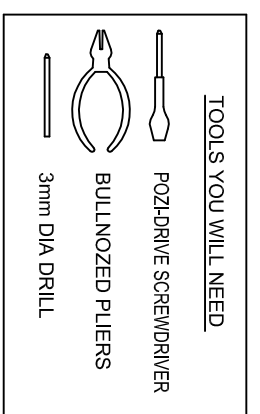

☆ NOTE - SOME DETAIL OMITTED IN THE INTERESTS OF CLARITY

NAME	MOD. No.	DATE	ISS.
SMW	M3800021V	15.12.06	3
SMW	M3800021F	17.10.06	2
SMW	PROTO.	24.3.06	1

THIRD ANGLE PROJECTION
DRAWN TO S.S.308

AMS NERVE LTD. owns the copyright to this drawing. It must not be copied in whole or in part, used for resale or otherwise without the written consent of the company.
AMS NERVE LTD.

SCALE 1:1

TITLE: AM5393 - MODS TO 8816 TO FIT 8804 FADER UNIT

DRAWN	APPD	DATE	AMS NERVE LTD. BILLINGTON ROAD, BURNLEY LANCOS BB11 5JL, ENGLAND. TEL: +44 (0)1282 459111 FAX: +44 (0)1282 417282 WEBSITE: WWW.AMS-NERVE.COM	DRG No.	AM5393
SMW		17.5.06		SHT	3